FRONT SIDE

SWISSTEN

BLUETOOTH SPEAKER HARMONY 300W

User guide

Whats in box?

1 x Speaker Harmony 300W
1 x Type C charging cable
1 x Wireless microphone
1 x 3,5mm AUX in cable
1 x User guide



Bluetooth version:	V5.3
Output power:	300W
Loundspeaker:	⦸ 30mm*2 + 78mm*2+8"
Wireless range:	max.12m
Battery capacity:	30000mAh
Powerintput:	5VDC3A/ 9VDC3A / 12VDC3A max 60W
Charge time:	≤3,5 hours
Playing time:	15h (50% volume)
Dimension:	487*165*282mm
Net weight:	7360g

Button configure:

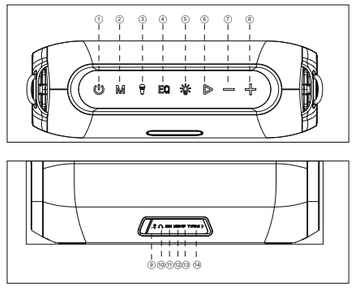

① ON /OFF
② Mode / BT disconnect / Reset
③ Voice assistant / Microphone pairing
④ EQ / Mode / Power Banky
⑤ TWS / Light
⑥ Play / Pause / Mute
⑦ Volume - / Previous track
⑧ Volume + / Next track
⑨ 6,5mm port
⑩ Headphones port
⑪ AUX IN
⑫ USB port
⑬ TF card port
⑭ Type-C input port

Button	Operation	Instruction	Prompt & LED status
POWER	Power ON	Press the POWER button to turn on the speaker. (If there is a USB disk, SD card, or cable, the speaker will play from the device automatically. Otherwise, the speaker starts in Bluetooth pairing mode.)	Prompt can be heart, Blue LED flashing in BT pairing mode
	Power OFF	Press the POWER button for 2 seconds to power off the speaker.	Prompt can be heart? LED off
MODE	Mode switch	Short press "MODE" button to switch the modes (BT/USB/SD/AUX).	Prompt can be heard
	BT disconnect	Hold "MODE" button for 3 seconds to disconnect the Bluetooth connection.	Prompt can be heard
	Reset	Hold "MODE" button for 8 seconds to clean all the settings and reset the speaker.	Prompt can be heard
RGB	RGB Light	The default RGB light mode is breathing. Press this button to switch into music mode. Press it again to turn off the RGB light.	RGB lightning: Breathing Rhythm, Warm white light, Turn off light
	TWS	In BT mode double press the RGB button active the TWS mode. This speaker will be the Primary one, other speakers will be Secondary. Press the RGB button again to quit the TWS mode.	1. TWS pairing mode: Yellow LED lights / If other speaker does not connect for 3 minutes, yellow LED turn off. 2. TWS paired: Primary - Yellow LED light ON / Secondary LED light ON

M	Force shut down	Press "Power"and "MODE"button simultaneously to shut down the speakerwhen it is malfunction.	LED off
	Voice assistnat	Short press Microphone button to activate the voice assistant function.	Prompt can be heard
EQ	EQ módy	The default EQ mode is Pop music. Short press the "EQ" button to switch into 3D mode. Press it again to switch into Bass mode.	Pop: Off 3D: White Bass: Green
	Mód PowerBanka	(The speaker must be turned on.) Hold the "EQ" button for 8 seconds to switch on the Power bank mode. USB-A power output is 5V DC 1A - 5W.	Prompt can be heard
PLAY/PAUSE	Play/Pause	(In BT / SD / USB mode.) hort press the PLAY button to Play / Pause playing the music.	Blue light allways on
		(In AUX mode) Short press this button to mute the speaker.	Blue light allways on when playing, Blue LED light blinking in mute mode.
	Mute	Hold the "EQ" button for 3S to turn on/off the mute function of the speaker; When the speaker is muted, there is sound when the headphone is plugged into the headphone jack.	

V-/Prev	Volume Down	Short press this button to decrease the volume.	
	Previous track	Hold this button for 2 seconds to switch the previous track.	
V+/Next	Volume UP	Short press this button to raise the volume up.	Prompt can be heard
	Previous track	Hold this button for 2 seconds to switch the next track.	
	Microphone Volume DOWN	Press Microphone and Volume down buttons together to decrease the volume of the microphone.	Prompt can be heard
	Microphone Volume UP	Press Microphone and Volume DOWN buttons together to raise up the volume of the microphone.	Prompt can be heard
EQ	Microphone reverberation DOWN	Press Microphone and Volume down buttons together to decrease the reverberation of the microphone.	Prompt can be heard
EQ	Microphone reverberation UP	Press Microphone and Volume DOWN buttons together to raise up the reverberation of the microphone.	Prompt can be heard
	Wired Mic. Volume Down	Press LIGHT button and VOLUME DOWN together to decrease the volume of wired microphone. There are 10 levels in total.	Prompt can be heard
	Wired Mic. Volume UP	Press LIGHT button and VOLUME UP together to raise the volume of wired microphone. There are 10 levels in total.	Prompt can be heard

Power OFF

- If there is no Bluetooth conntection with any device, the speaker will turn off after 60 minutes.
- And if there is Bluetooth connection but no operation, the speaker will not turn off neither.
- When speakers battery is lower than 20%, you will heard the alarm sound.
  If the battery is lower than 10%, the speaker will turn off automatically. (ou can start the speaker again, but with only power of 10%.)

Live streaming & Record

Connect mobile and speaker by OTG USB cable to active live streaming and recording the all live streaming audio contents into TF card or USB flash disk.

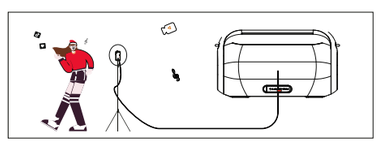

AUX Mode

When there is 3.5mm audio cable pluged in, you will heard the prompt. The Blue LED light is always on when you are playing the music. Or starts blinking when you pause.

SD Card / USB Flash disk Mode

When there is SD Card or USB Flash disk pluged in, you will heard the prompt. The Blue LED light is always on when you are playing the music. Or starts blinking when you pause.

How to pair / unpair with Bluetooth

1. Turn on the "Swissten HARMONY 300" speaker. Go to your Bluetooth device searching and click on "SWISSTEN HARMONY 300" to connect it.
2. While is your Bluetooth connected, hold the MODE button for 3 seconds to quit the Bluetooth connection.

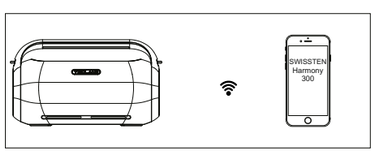

How to TWS pairing

1. Turn on both speakers and make sure they haven't been paired with any other device. (You can hold the MODE button for 8 seconds to reset the two speakers before TWS pairing.)
2. Choose one speaker and DOUBLE click on the M (MODE) button to enter the TWS pairing mode. This first speaker you choose will be primary, and another speaker will be secondary. Both speakers will flash in yellow color. (Blue LED color is for off the function.) The speakers will connect automatically.
3. After the TWS connection, on both of the speakers will be yellow LED light. On the primary speaker is the blue light flashing, and the secondary blue light is staying on.
4. To quit the TWS mode you can press the M (MODE) button on both speaker.
5. If the speakers are paired and your turn offo ne of them. After you turn them on again, both of them will connect together automatically.
6. In the pairing mode, you can only on the primary speaker answer the incoming phone call. The secondary speaker will not allow you to answe the call.

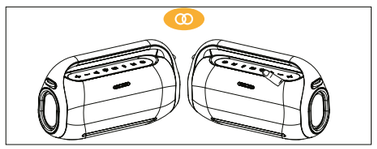

Power bank mode

Power bank mode
(The speaker must be turned on.) Hold the "EQ" button for 8 seconds to switch on the Power bank mode. USB-A power output is 5V DC 1A - 5W.

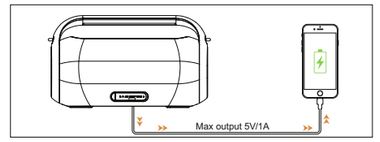

Charging the speaker

1. When the battery of the speaker is low, the LED light will start flashing in RED color.
2. When the battery of the speaker if fully charged, the RED light will turn OFF.

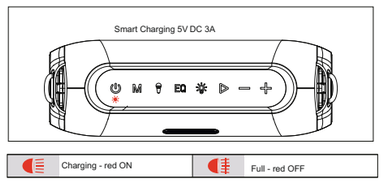

The company GAMACZ.CZ s.r.o. declares that this radio equipment is in compliance with Directive 2014/53/EU. The consolidated text of the EU statement of conformity is available at the following internet address www.swissten.com.