


SWISSTEM 

**Power Banka Power Line
60.000 mAh - 65W**



Uživatelská příručka

Obsah balení
Power Banka, manual, dobijecí kabel

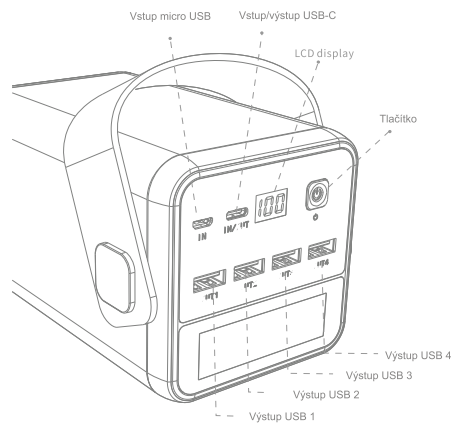

Indikátor nabíjení
Indikátor ukazuje stav nabití Power Banky



100% nabitó



0% nabitó

Specifikace

Kapacita: 60000mAh (3.7V/222Wh)
Baterie: Li-polymer battery
Výstup USB-A 1: 4.5V DC 5A, 5V DC 4.5A, 5V DC 3A, 9V DC 2A, 12V DC 1.5A - 22.5W
Výstup USB-A 2: 5V DC 3A, 9V DC 2A, 12V DC 1.5A - 18W
Výstup USB-A 3: 5V DC 3A
Výstup USB-A 4: 5V DC 3A
Výstup USB-C: 5V DC 3A, 9V DC 3A, 12V DC 3A, 15V DC 3A, 20V DC 3.25A 65W
Vstup microUSB: 5V DC 2A, 9V DC 2A
Vstup USB-C: 5V DC 3A, 9V DC 3A, 12V DC 3A, 15V DC 3A, 20V DC 3.25A 65W
Rozměr: 135x82x82mm
Hmotnost: 1260g
Materiál: Nehořlavý ABS+PC
Svítlina: 6 LED diod, 22-28LM proud 60mAh, 5.000-6.000K
Kabel: USB-C/USB-C 65W, 1m
Bezpečnostní ochrany: přepětí, přetížení, zkrat, přehřátí, přebíjení a podvýbití.



Po obdržení produktů postupujte podle níže uvedených kroků.

- Používejte prosím Power Banku k nabíjení zařízení, pouze dokud se Power Banka nevybitje a na LCD displeji se nezobrazí 0% (nenabíjete Power Banku během používání).
- Power Banku dobíjejte do plné kapacity, dokud se na LCD displeji neobjeví 100 %.
- (Nepoužívejte Power Banku k současnému nabíjení jiného zařízení.)
- Vyše uvedený krok proveďte 5-8krát, tím naformátujete baterie Power Banky, zpřesní se zobrazení zbývající kapacity a získáte tím plnou maximální kapacitu.

Režim malého proudu

Dvakrát klikněte na zapínací tlačítko. Číslo na displeji začne blikat, což znamená, že přechází do režimu malého proudu (podpora nabíjení TWS, náramků, Watch a dalších zařízení). Opětovným dvojitým stisknutím zapínacího tlačítka režim malého proudu opustíte.

Režim svítlina

Dlouhý stisk zapínacího tlačítka: zapnutí / vypnutí módu LED svítliny.
Po zapnutí módu svítliny: krátkým stisknutím tlačítka se přepíná mezi světelnými módy. (1x silné světlo, 2x slabé světlo, 3x SOS mód)



*** Když se nenabíjí Power Bank:**

- Zkontrolujte, zda jsou použity kabel, nabíječka nebo adaptér funkční.
- Pokud ne, vyberte kompatibilní komponenty pro nabíjení.

*** Když se nenabíjí telefon:**

- Pokud jsou výše uvedené údaje v pořádku, obraťte se na místního prodejce, který vám pomůže.


SWISSTEM 

**Power Bank Power Line
60.000 mAh - 65W**



User guide

Packing details
Power Bank, manual, charging cable

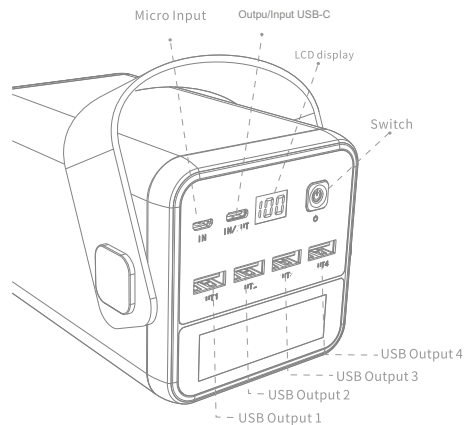

Power indicator
The indicators show the remaining power of this device



100% Power



0% Power

Specification

Capacity: 60000mAh (3.7V/222Wh)
Battery: Li-polymer battery
Output USB-A 1: 4.5V DC 5A, 5V DC 4.5A, 5V DC 3A, 9V DC 2A, 12V DC 1.5A - 22.5W
Output USB-A 2: 5V DC 3A, 9V DC 2A, 12V DC 1.5A - 18W
Output USB-A 3: 5V DC 3A
Output USB-A 4: 5V DC 3A
Output USB-C: 5V DC 3A, 9V DC 3A, 12V DC 3A, 15V DC 3A, 20V DC 3.25A 65W
Input micro USB: 5V DC 2A, 9V DC 2A
Input USB-C: 5V DC 3A, 9V DC 3A, 12V DC 3A, 15V DC 3A, 20V DC 3.25A 65W
Size: 135x82x82mm
Weight: 1260g
Material: Non-flammable ABS+PC
LED light: 6pcs LED, 22-28LM working current 60mAh, 5.000-6.000K
Cable: USB-C/USB-C 65W
Protection: overvoltage, overload, short circuit, overheat, overcharge, undercharge



Please follow the steps below to activate the product when you get it.

- Please use the power bank to charge the device until the LCD display shows 0%. (Do not charge the power bank while using it.)
- Then charge the power bank until the LCD display shows 100%. (Do not charge other devices while the power bank is charging.)
- Please make sure the power is on and there is some power left in the device.

Low current mode description

Double-click the power button: The LCD number display begins to flash, which means that it enters the small current mode (which supports charging TWS, bracelets, watches, and other devices), and double-click to exit the mode.

LED light mode

- Long-press the power button to enter or exit LED light mode.
- After entering the light mode, click the power button to adjust the lightning mode (1 time - strong light, 2 times - weak light, 3 times - SOS light).



FAQ

When it's not charging this device:

- Please check the cable, charger, or adapter you used to see if they are working.
- If it doesn't work, please choose compatible components to charge it.

When it's not charging the phone:

- Please make sure the power is on and there is power left in the power bank.
- If the steps above are checked, please go to the local retailer for assistance.