





## SWISSTEN BLUETOOTH REPRODUKTOR X-BOOM

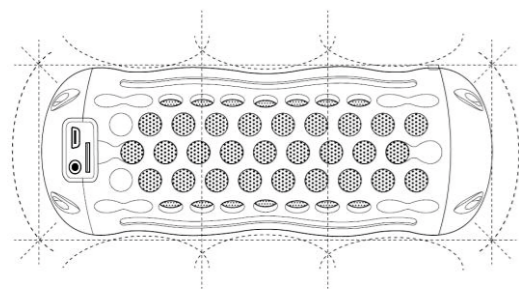

### UŽIVATELSKÝ MANUÁL

Přečtěte si pozorně tento uživatelský manuál předtím, než začnete reproduktor používat.

#### FUNKCE TLAČÍTEK

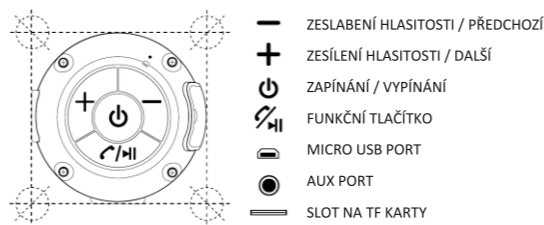

#### SPECIFIKACE

Název: Swissten bluetooth reproduktor X-BOOM  
Bluetooth verze: V5.0  
Voděodolnost: IPX5  
Nabíjecí vstup: DC 5V / 1A  
Baterie: 2000mAh Lithium baterie  
Doba nabíjení: 4h  
Výkon reproduktoru: 2 x 5W  
Frekvenční rozpětí: 150Hz – 18KHz  
Zkreslení: <0,5 %  
Odstup signálu od šumu: >65dB  
Hlavní materiály: ABS + silikon  
Rozměry: 17 x 7 x 7 cm  
Hmotnost: 170g  
Doba přehrávání: 8h

#### FUNKCE REPRODUKTORU

##### BLUETOOTH REŽIM

Nejprve stiskněte a podržte zapínací tlačítko po dobu tří sekund. Po zapnutí reproduktor vstoupí automaticky do režimu párování bluetooth. Poté můžete připojit bluetooth reproduktor k vašemu zařízení.

##### PÁROVÁNÍ:

- Otevřete „nastavení bluetooth“ ve vašem telefonu/tabletu a klikněte na „hledání zařízení“. Některé smartphony a tablety vyhledávají bluetooth přístroje automaticky.
- Počkejte, až se na obrazovce objeví toto zařízení. Kliknutím na něj spárujete bluetooth reproduktor s vaším mobilním zařízením.
- Smartphone či tablet bude toto spárování indikovat na displeji, pokud proběhne úspěšně. Zároveň se ozve z reproduktoru potvrzovací ohlášení.

Pokud byl již reproduktor spárován s vaším bluetooth zařízením, připojí se automaticky k tomuto poslednímu zařízení, jakmile reproduktor zapnete. Další mobilní telefony nebo tablety nelze připojit k bluetooth reproduktoru, je-li reproduktor již k nějakému zařízení připojen. Bluetooth reproduktor nelze připojit k zařízení, ke kterému je již připojeno některé jiné bluetooth zařízení. Je nutné vypnout bluetooth připojení a připojit váš telefon k reproduktoru znovu.

##### PŘEHRAVÁNÍ HUDBY

Pokud spojení proběhlo úspěšně, otevřete na svém mobilním zařízení přehrávání hudby a bluetooth reproduktor začne automaticky hrát. Hudební přehrávač můžete ovládat pomocí tlačítek na bluetooth reproduktoru.

Krátkým stiskem funkčního tlačítka přehrajte nebo pozastavíte skladbu. Krátkým stiskem „+“ přehrajete další skladbu. Dlouhým stiskem zvýšíte hlasitost. Krátkým stiskem „-“ přehrajete předchozí skladbu. Dlouhým stiskem snížíte hlasitost.

#### PŘÍJEM HOVORŮ

V případě příchozího hovoru se ozve upozorňující tón. K příjmu hovoru stiskněte funkční tlačítko. K zavěšení hovoru stiskněte funkční tlačítko znovu.

#### TF CARD REŽIM

Vložte TF kartu, když je reproduktor zapnutý. Reproduktor se automaticky přepne do TF card režimu. Poté můžete přehrávat hudbu (MP3/WMA/APE formát) z vaší karty. Přehrávání hudby lze taktéž ovládat pomocí tlačítek na reproduktoru.

#### ŘEŠENÍ PŘÍPADNÝCH PROBLÉMŮ

Problém	Řešení
Neúspěšné spárování a připojení	1. Zkontrolujte, zda je reproduktor v režimu vyhledávání a případně jej restartujte. 2. Připojení je složitější jsou-li v blízkosti jiná bluetooth zařízení. Vypněte je. Vypněte také bluetooth zařízení, které bylo připojeno k reproduktoru naposledy, a opětovně připojte reproduktor.
Ztlumený nebo zkreslený zvuk	1. Upravte nastavení hlasitosti na vašem telefonu nebo reproduktoru. 2. Baterie je vybitá. Nabijte ji.
Trhaný zvuk	1. Zkontrolujte, zda zařízení není za efektivní vzdálenosti k připojení. 2. Zkontrolujte, zda není mezi vaším zařízením a reproduktorem překážka.
V bluetooth režimu nesvítí indikátor	1. Baterie je vybitá. Nabijte ji. 2. Restartujte reproduktor.

#### NABŮJENÍ


Při prvním použití se ujistěte, že je reproduktor plně nabit. Reproduktor bude blikat v případě, že je potřeba ho dobít. Dobijte reproduktor pomocí přiloženého kabelu, který je kompatibilní se kterýmkoliv běžným PC a nabíječkou mobilních telefonů. Během dobíjení bude indikátor svítit červeně. Až bude baterie plně nabitá, indikátor se automaticky vypne.

#### OPATŘENÍ

- Skladujte a používejte produkt v prostředí o pokojové teplotě.
- Nerozebírejte, neopravujte ani jinak neupravujte produkt.
- Používejte nabíječku s udávaným napětím a proudem pro tento reproduktor.
- Poslouchání hudby při vysoké hlasitosti po delší dobu může způsobit poškození sluchu. Snažte se vyhnout příliš vysoké hlasitosti při dlouhodobém přehrávání hudby.
- Rozebrání nebo úprava produktu, může způsobit ztrátu záruky.




## SWISSTEN BLUETOOTH SPEAKER X-BOOM

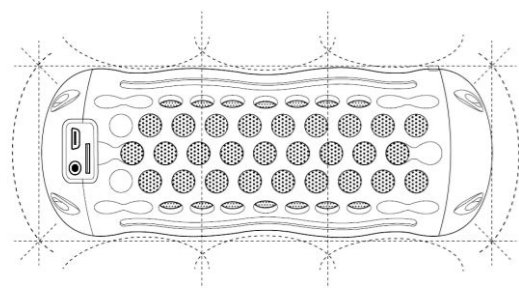

### USER'S MANUAL

Please read this manual carefully before using this speaker.

#### BUTTON FUNCTION

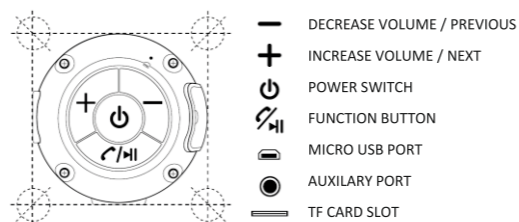

#### SPECIFICATION

Name: Swissten bluetooth speaker X-BOOM  
Bluetooth Version: V5.0  
Waterproof: IPX5  
Charging Input: DC 5V / 1A  
Battery: 2000mAh Lithium battery  
Charging time: 4h  
Output power: 2 x 5W  
Freq. response: 150Hz – 18KHz  
Distortion: <0,5 %  
Whole signal to noise ratio: >65dB  
Main material: ABS + silicone  
Size: 17 x 7 x 7 cm  
Weight: 170g  
Playing time: 8h

#### SPEAKER FUNCTION

##### BLUETOOTH MODE

First press and hold the power switch button for 3 seconds to power the speaker on. When powered on it will automatically enter Bluetooth mode. Then you can connect the Bluetooth speaker to your Bluetooth enabled device.

##### PAIRING:

- Open the Bluetooth setting on your phone or tablet and click „search device“. Some smartphones or tablets will search for Bluetooth devices automatically.
- You have found the Bluetooth speaker when the screen displays this device, click on it your device to pair the connection.
- The phone or tablet will indicate when the pairing is successful. Speaker will also make a tone to confirm.

If the speaker has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on. Other phones or tablets can't be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet. The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker again.

##### MUSIC PLAYING

Open the player device when the connection is succesful. Click to lay music and the Bluetooth speaker will play music. You can operate the player with buttons on the Bluetooth speaker.

Short press „function button“ to play / pause.  
Short press „+“ to play next. Long press to volume up.  
Short press „-“ to play previous. Long press to volume down.

#### ANSWER AND HANG UP THE PHONE

There will be an alert sound from the speaker when there is a phone call. Click „function button“ to answer the call. And click „function button“ again to hang up.

#### TF CARD MODE

Insert the TF card when the speaker is turned on. The speaker will enter itself into the TF card mode. It can play the music (MP3/WMA/APE format) from your card. You can operate with the buttons on the Bluetooth speaker.

#### FREQUENTLY ASKED QUESTIONS

Question	Solution
Unsuccesful pairing and connection	1. Check the speaker and make sure it is the searching state or reboot the speaker. 2. Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices. Turn off the Bluetooth device, which was connected with the Bluetooth speaker last time and reconnect the speaker.
Muted or distorted sound	1. Click the volume of your phone or the speaker and adjust the volume. 2. The battery is low. Please charge it.
Choppy music play	1. Check if the device is beyond the effective connection distance. 2. Check if there is any obstacle between the speaker and your device.
The indicator not shining in Bluetooth mode	1. The battery is low. Please charge it. 2. Please reboot the speaker.

#### CHARGING

Please make sure the speaker is fully charged in first use. The light and display will flash, indicating that speaker needs to be recharged. Charge the speaker with the provided USB cable which is compatible with any computer or cell phone charger. The charge indicator light will be red while charging. Then when the battery is fully charged it will turn off.

#### PRECAUTIONS

- Please store and use the product in room temperature environment.
- Do not disassemble, repair, or modify the product.
- Please use the power charge with rated voltage for the speaker.
- It may cause hearing damage if playing music in high volume for a long time. Consider avoiding excessively high volume when playing music for a long time.
- Disassemble this product will invalidate the warranty.