


**ULTIMATE 24 Watts**

Špičkový Bluetooth reproduktor s mnoha funkcemi. Díky fantastickému zvuku si můžete vychutnat oblíbenou hudbu doma, na zahradě nebo na výletě.

**Vlastnosti:**

1. Podpora TWS – True Wireless Stereo;
2. Patentovaný vzhled
3. Podpora hands-free volání
4. Podpora přehrávání karet micro SD
5. Výstupní výkon: 24 W (2 x 12 W)
6. Vestavěná lithiová baterie 3.7V / 2000 mAh
7. Vodotěsnost IPX5, kombinace TPU+ABS
8. Funkce SOS
9. Výstupní impedance 4Ω
10. Nabíjení reproduktoru: USB-C 5V DC 2A

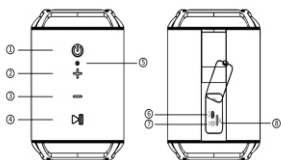

**1. Tlačítko ON / OFF „⏻“**

- A) Dlouhým stisknutím tlačítka (3 sekundy) reproduktor zapnete, rychle se rozblíká modrá kontrolka a ozve hlasová výzva. Opětovným stisknutím tlačítka (3 sekundy) reproduktor vypnete.
- B) Po zapnutí se automaticky přepne do režimu Bluetooth. Po vložení micro SD karty a připojení audio kabelu vyberte krátkým stisknutím tlačítka mód v jakém chcete přehrávat (Bluetooth, micro SD nebo AUX).
- C) Dvakrát krátce stisknete tlačítko pro SOS alarm. Opětovným dvojitým krátkým stisknutím tlačítka alarm zastavíte.

**2. Tlačítko zvýšení hlasitosti / další skladba „+“**

- A) Dlouhým stisknutím tlačítka zvýšíte hlasitost.
- B) Krátkým stisknutím tlačítka přehrajete další skladbu.

**3. Tlačítko snížení hlasitosti / předchozí skladba „-“**

- A) Dlouhým stisknutím tlačítka snížíte hlasitost.
- B) Krátkým stisknutím tlačítka přehrajete předchozí skladbu.

**4. Tlačítko play / pause „⏮“**

- A) Stisknutím tlačítka v módu přehrávání hudby zastavíte přehrávání.
- B) Dalším stisknutím tlačítka se začne hudba přehrávat.

**5. Led kontrolka**

- A) Vyhledávání bluetooth spojení - bílá modře
- B) Bluetooth je připojeno - svítí modře
- C) Baterie potřebuje dobít - svítí červeně

**6. USB-C port**

Dobíjecí port 5V DC 2A

**7. Audio vstup 3,5mm Jack**

Připojte reproduktor k počítači, telefonu, MP3/MP4 nebo jinému zařízení pomocí audio kabelu, z reproduktoru se ozve "Audio in Mode" a pak může přehrávat zvukové soubory.

**8. Slot pro kartu Micro SD**

Po vložení karty micro SD můžete přehrávat hudební soubory MP3.  
Poznámka: Pokud je soubor příliš velký nebo složitý, může být nečitelný.

**Pokyny pro Bluetooth**

Párování se zařízením Bluetooth proveďte následujícím způsobem:

1. Dlouhým stisknutím tlačítka ON / OFF (3 sekundy) reproduktor zapnete, modrá kontrolka se rychle rozblíká a ozve se hlasová výzva "Bluetooth is waiting for connection".
  2. Zapněte funkci Bluetooth mobilního telefonu nebo jiného Bluetooth zařízení, poté vyhledejte „SWISSTEN Ultimate“ a připojte jej. Párování Bluetooth se dokončí hlasovou výzvou "Bluetooth is connected".
- Poznámka: Při přehrávání hudby se držte v blízkosti reproduktoru, aby byl signál stabilní. Pokud je vzdálenost příliš velká (více než 10 m), může dojít k jeho odpojení.

**Volání s handsfree**

Po připojení telefonu k bluetooth reproduktoru můžete využít funkci handsfree pro volání.

- A) Přilem hovoru: V režimu Bluetooth krátkým stisknutím tlačítka play/pause přijmete hovor. Dalším krátkým stisknutím tlačítka play/pause hovor ukončíte.
- B) Odmítnuti hovoru: Když telefon zazvoní, dlouhým stisknutím tlačítka play/pause odmítnete příchozí hovor.
- C) Vytočení poslední volaného čísla: Krátkým dvojitým stisknutím tlačítka play/pause vytočíte poslední volané číslo.

**True Wireless Stereo (TWS)**

Párování proveďte následujícím způsobem:

1. Zapněte dva reproduktory, dlouze stisknete tlačítko play/pause u jednoho z nich a ozve se zvukový signál. To znamená, že je aktivována funkce TWS. Když modrá kontrolka druhého reproduktoru přestane blikat a začne svítit, znamená to, že oba reproduktory Bluetooth jsou úspěšně spojeny.
2. Zapněte funkci Bluetooth na mobilním telefonu nebo jiném zařízení Bluetooth, vyhledejte SWISSTEN ULTIMATE a připojte jej. Poté mohou oba reproduktory Bluetooth synchronně přehrávat hudbu.
3. Dlouhým stisknutím tlačítka play/pause jednoho z nich funkci ukončíte, pak bude k mobilu připojen pouze jeden reproduktor.

**Přehrávání z PC pomocí USB/USB-C kabelu a kopírování souborů na kartu micro SD**

- A) Zapněte reproduktor Bluetooth, připojte reproduktor s počítačem pomocí kabelu USB/USB-C, poté může přehrávat zvukové soubory přímo z počítače.
- B) Vypněte reproduktor Bluetooth a vložte kartu micro SD. Připojte reproduktor k počítači kabelem USB/USB-C a zapněte reproduktor. Poté můžete kopírovat a mazat soubory na kartě micro SD prostřednictvím počítače.

**Nabíjení:**


Když je u zapnutého reproduktoru slabá baterie ozve se hlasové upozornění "Low battery, please charge". V tom případě nabíjte reproduktor pomocí adaptéru 5V DC 2A. Červená kontrolka bude během nabíjení stále svítit a po úplném nabití zhasne. Doba nabíjení je obvykle 3 až 4 hodiny.  
Po úplném nabití nezapomenejte adaptér odpojit ze zásuvky.  
Poznámka: Doporučujeme reproduktor před prvním použitím plně nabít.

**ULTIMATE 24 Watts**

SWISSTEN ULTIMATE is a high-end Bluetooth Speaker with many features. In your spare time, you can enjoy fantastic music at home, coffee house and even trip. Anytime, anywhere, music to non-stop.

**Properties**

1. Support True Wireless Stereo
2. Patented appearance
3. Support Hands-free call
4. Support TF card playing
5. Output power: 2\*12W
6. Built-in 3.7V 2000mAh lithium battery
7. IPX5 waterproof, TPU+ABS two-color injection molding
8. SOS function
9. Output impedance 4Ω
10. Charging USB-C 5V DC 2A

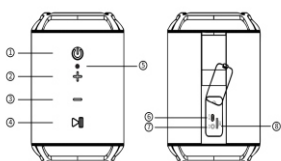

**1. Button switch ON / OFF „⏻“**

- A) Long press button for 3 seconds to power on the speaker, the blue light will fast flashing with voice prompt. Press the button for 3 seconds again to power off.
- B) After power on, it will enter into Bluetooth mode automatically. After inserting TF card and audio cable, Short press button to select a working mode (Bluetooth, TF card and AUX).
- C) Short press button it twice for SOS alarm. Short press button it twice again to stop the alarm.

**2. Button volume up / next song „+“**

- A) Long press button for volume up.
- B) Short press button for play the next song.

**3. Button volume down / previous song „-“**

- A) Long press button for volume down.
- B) Short press button for play previous song.

**4. Button play / pause „⏮“**

- A) In music playing mode, short press button for pause.
- B) Short press button again for play.

**5. LED Indicator light**

- A) Bluetooth is waiting for connection with blue light fast flashing.
- B) Bluetooth is connected with blue light being on all the time.
- C) Red light is being on while charging.

**6. USB-C port**

Charging port 5V DC 2A

**7. Audio input 3.5 mm jack**

Connect the speaker with computer, phone, MP3/MP4 or other device with audio cable. It will remind "Audio in Mode", and then it can play above audio files directly.

**8. TF card (Micro SD) slot**

Insert the TF card to play MP3. It is compatible with most brands and the maximum capacity is 32GB.  
Note: It may be unreadable when the file is large or complex.

**Bluetooth Instruction**

Please pair with your Bluetooth device as follows:

1. Power on the Bluetooth Speaker with voice prompt "Bluetooth is waiting for connection". The blue light will fast flashing.
  2. Turn on the Bluetooth function of your mobile phone or other Bluetooth device. Then search "SWISSTEN ULTIMATE" and connect it. Bluetooth pairing is completed with a voice prompt "Bluetooth is connected".
- Note: When playing music, please keep close to the speaker to keep the signal stable. If the distance is too far (more than 10 m), the Bluetooth may be disconnected.

**Hands-free call**

After the phone is connected to the bluetooth speaker, the speaker can realize the handsfree call function through built-in microphone.

- A) Answer: In Bluetooth mode, short press button play/pause to answer the phone, short press button again to hang up.
- B) Reject: When the phone rings, long press button play/pause to reject the coming call.
- C) Short press button play/pause it twice for dialing the latest phone number you made.

**True Wireless Stereo**

Pair as follows:

1. Power on two speakers, long press "button play/pause of one of them with Ding-Ding sound, which means TWS function is activated. When the other speaker's blue light is stop flashing and keep on. It means that second bluetooth speakers are successfully connected in series.
2. Turn on the Bluetooth function of your mobile phone or other bluetooth device, search "SWISSTEN ULTIMATE" and connect it. Then both bluetooth speakers can play music synchronously.
3. Long press button play/pause of one of them to quit out the function, then only one speaker is connected to the mobile.

**USB cable sound card function/ Copy files function:**

- A) Turn on the Bluetooth Speaker, connect the speaker with computer by Type-C-USB cable, then it can play audio files in computer directly.
- B) Turn off the Bluetooth Speaker and insert the TF card, connect the speaker with computer by Type-C-USB cable and turn on the speaker, then you can copy and delete files in TF card through computer.

**Charging**

In the state of power-on, the speaker is low battery with a voice prompt "Low battery, please charge". Please charge the speaker timely with standard adapter. The red indicator light will be on all the time during charging and will go out after fully charged. Please recharge it with 5V DC 2A adapter and the charging time is normally 3-4 hours. Please remember to unplug the adapter after it is fully charged.  
Note: We suggest fully charge the speaker before you using it at the first time.