

Bluetooth earphones SWISSTEN ACTIVE

Bluetooth version: 4.2

Support: HSP, HFP, A2DP, AVRCP

Working frequency: 2.40-2.48 GHz

Range: 10 m

Battery: 65mAh li-polymer 3,7V

Input voltage: 5V – 500mA

Music time: about 3 hours


Charging time: 1,5 - 2 hour

Output voltage: 5V

Charging input: Micro USB



Function	Operation
power on	press multi-function button 3s
power of	press multi-function button 3s
pairing mode	press multi-function button 5s
answer / hang up	click multi-function button
rejection	press multi-function button 2s
final code redial	double-click multi-function button
previous / next	click button volume + = next, volume - = previous
volume adjustment	long-press volume +/- to adjust
system setting	auto turned off once charging
battery indicator	show on the ios device screen

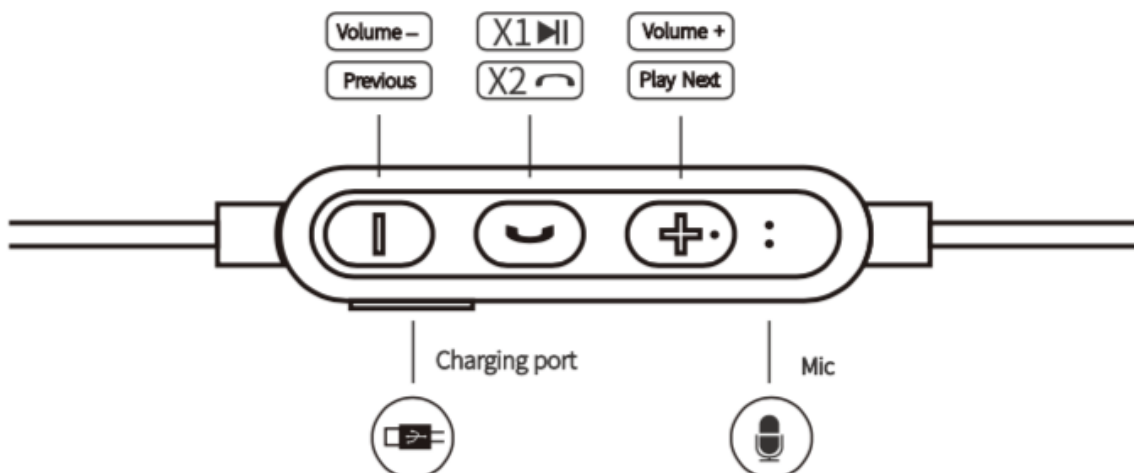

Status	Led indicator
pairing status	red and blue lights flicker alternately
connected status	blue light flashes slowly
music / call status	blue light flashes slowly
charging status	red light is bright
complete charging	red light goes out
low power	red light flashes

Important instruction

In order to be responsible for your hearing, it is recommended that use the earphones according to your situation, choose the appropriate decibel level and the appropriate volume to avoid hearing damage.

Let ears enjoy music comfortably

1. Please obey the suggestions of audiologist. Don't turn up your player volume too high, don't wear earphones for a long time, please keep you earhave a rest properly.
2. If you hear the sound s too piercing, please low down the volume or stop using.
3. Please be sure to correctly wear the right or left earphones which make you a good feeling to enjoy perfect and comfortable music. „L“ for left ear. „R“ for right ear

Wireless Earphone Connection Operation

1. Please use the wireless earphone and mobile phone (or other wireless devices) at a distance of 1 meter, the closer the better.
2. Make sure that earphone is turned off and press the multi-function button for about 5 seconds until the red/blue lights flicker alternately, the enter the pairing status at this time, waiting for the connection.
3. Open the phone wireless function (or other wireless devices), search or scan it. At this point, the phone will search all the nearby wireless devices and click on the earphone name: Swissten active, after successful pairing, the earphone indicator blue light flashes slowly for 8 times, indicating pairing connect successful.

Earphone Maintenance

1. Keep earphone clean is essential to ensure safe and hygienic use.
2. Be careful not to use more than the input power of the earphones, which may cause sound distortion and damahe the earphones.
3. When you don't use it, please keep it in the earphone box or bag so that ensure to store in a clean and dry environment.
4. Avoid to liquid, extreme temperature, high humidity situation.
5. Do not drop from the height or heavy pressure earphone, do not immerse the earphone in the water.
6. The earbuds will be damaged with the use of time.

Precautions for use

1. Try to avoid high volume for a long time to continuous use, which avoid to damage hearing.
2. Never use earphone during driving or biking, which ensure safe journey.
3. Please stop using the earphone when you feel uncomfortable.
4. Please store the earphone where the child cannot touch to avoid the damage via swallow.
5. Once the earphone or other parts fall of in your ear, please be careful to avoid it to deep in ear. then ask professional medical for help. Non-professionals may cause harm.

